

IDEAL 2270

Compact deskside shredders with a second shredding head for CDs/DVDs

Two separate feed openings with separate shredding heads for paper and for CDs/DVDs. Two integrated shred containers for easy waste separation. Photo cell controlled automatic start and stop. Multifunction switch for stand-by / stop (off) / reverse. Pilot light. Transparent safety flap in the feed opening for paper as additional safety element. High-quality, paper clip proof cutting shafts from special hardened steel with lifetime guarantee. Quiet, powerful and energy-efficient 150 Watt single phase motor. Double motor protection. Fully closed gear box housing and durable gears. High-quality wooden cabinet. Removable bin for paper shreds (20 litres volume) made from impact-resistant plastic with large window showing fill level. Separate bin for CDs/DVDs or credit cards (3 litres volume). Magnetic proximity switch for automatic stop if the shred bins are removed from the cabinet (cross cut). Feed opening: 220 mm (paper). Power connection: 230 V / 50 Hz / 1~ (other voltages available). Dimensions (H x W x D): 537 x 345 x 220 mm, Weight: 12.5 kg / 13.0 kg (cross cut).

SHREDDER TYPES

4 mm strip cut

Sheet capacity*: 11-13 / 9-11

Security level P-2

3 x 25 mm cross cut

Sheet capacity*: 6-7 / 5-6

Security level P-4

2 x 15 mm cross cut

Sheet capacity*: 4-5 / 3-4

Security level P-5

* A4 paper, 70 g/m² / 80 g/m²




IDEAL


WWW.IDEAL.DE

IDEAL 2270

 Features

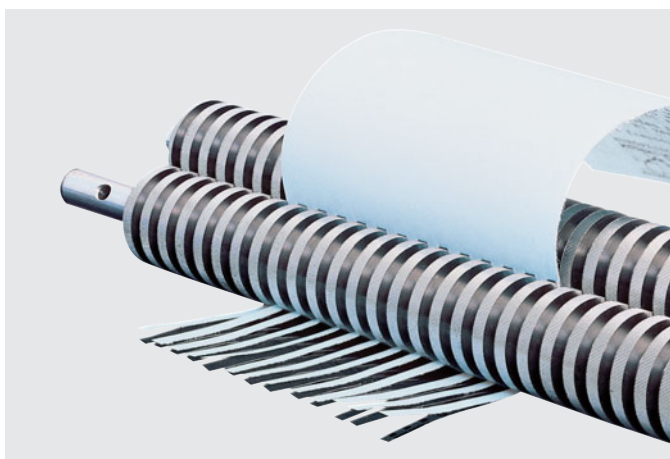

 SOLID STEEL CUTTING SHAFTS Robust and durable: high-quality paper clip proof cutting shafts from special hardened steel. Lifetime guarantee on the solid steel cutting shafts under conditions of fair wear and tear.

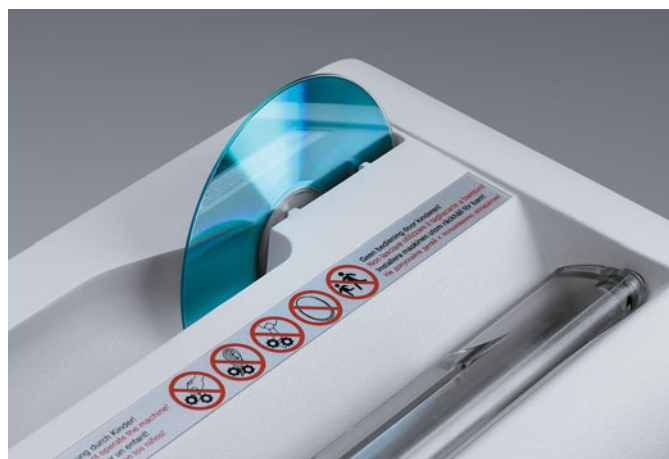

SECOND CUTTING HEAD Separate feeding slot for the disposal of CDs and DVDs with a second cutting head. Photo cell for automatic start and stop.



MULTIFUNCTION SWITCH Easy operation is guaranteed with the three-position rocker switch for stand-by / stop (off) / reverse.



REMOVABLE SHRED BIN Shred bin with large window showing fill level and collection tray for CDs/DVDs. Magnetic switch stops shredder if bin is removed.

